


**PP 505**



**BELARRA**

**PULVERIZADOR MANUAL**

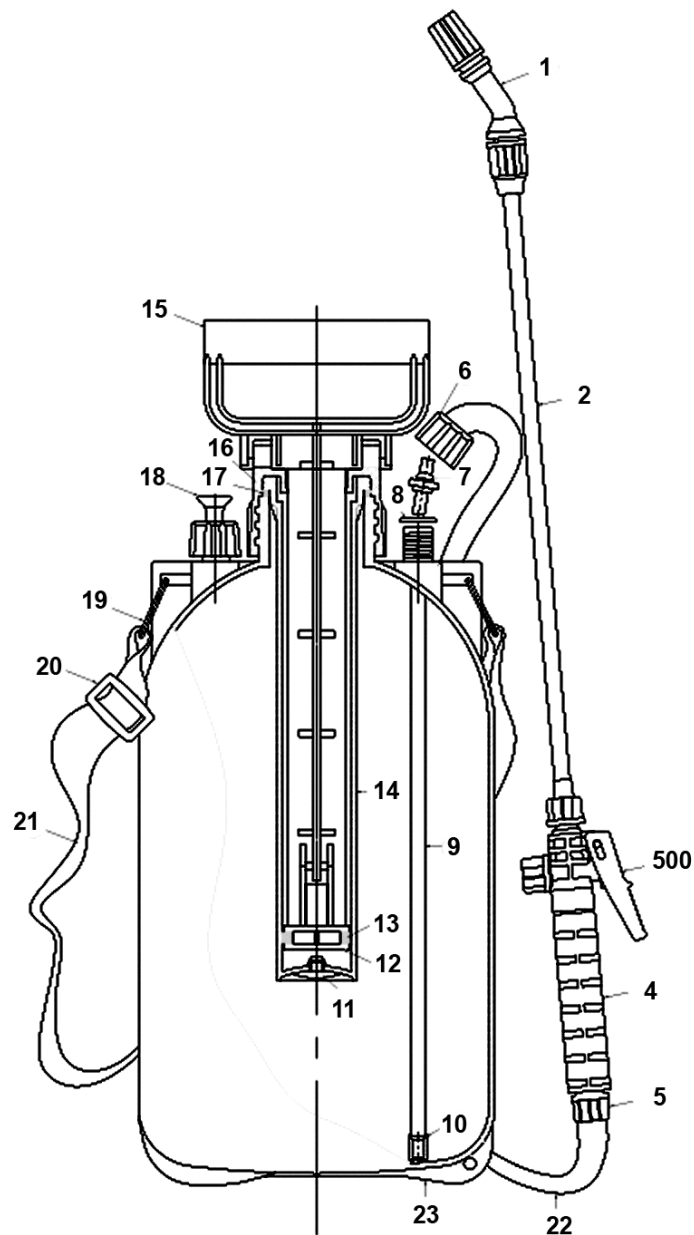

# PP 505



# BELARRA

## PULVERIZADOR MANUAL



|     |            |                  |               |
|-----|------------|------------------|---------------|
| 1   | PP505R1001 | BOQUILLA         | NOZZLE        |
| 2   | PP505R1002 | TUBO             | TUBE          |
| 500 | PP505R1500 | INTERRUPTOR      | SWITCH        |
| 4   | PP505R1004 | AGARRE           | GRIP          |
| 5   | PP505R1005 | TUERCA           | NUT           |
| 6   | PP505R1006 | TUERCA           | NUT           |
| 7   | PP505R1007 | CONECTOR         | CONNECTOR     |
| 8   | PP505R1008 | ARANDELA         | WASHER        |
| 9   | PP505R1009 | TUBO             | TUBE          |
| 10  | PP505R1010 | FILTRO           | FILTER        |
| 11  | PP505R1011 | SELLO            | SEAL          |
| 12  | PP505R1012 | PISTON           | PISTON        |
| 13  | PP505R1013 | ANILLO DE PISTON | PISTON RING   |
| 14  | PP505R1014 | CILINDRO         | CYLINDER      |
| 15  | PP505R1015 | MANIJA           | HANDLE        |
| 16  | PP505R1016 | CUBIERTA         | COVER         |
| 17  | PP505R1017 | ANILLO DE SELLO  | SEAL RING     |
| 18  | PP505R1018 | VALVULA          | VALVE         |
| 19  | PP505R1019 | GANCHO           | HOOK          |
| 20  | PP505R1020 | HEBILLA          | BUCKLE        |
| 21  | PP505R1021 | CORREA DE CARGA  | CARRYING BELT |
| 22  | PP505R1022 | CONDUCTO         | PIPE          |
| 23  | PP505R1023 | BOTELLA          | BOTTLE        |